





 









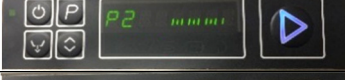
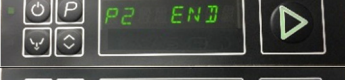

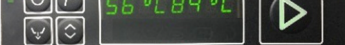


## Smeg Topline Hood Type - User Guide








Symbol	Description	Symbol	Description
	On / Off Button		Wash Tank Element On
	Program Select Button		Rinse Boiler Element On
	Cycle START / STOP Button		Coloured Light Indicating Machine Status Green = Ready To Use Blue = Filling/Washing/Draining Red = Error
	Drain Button		Mains Power Off
	Settings Adjustment Button		Mains Power On
	Low Salt Warning Light (On Models With Water Softeners)		Drain Cycle In Progress




 

On Screen Message	Message Description
	Machine in standby mode (press and hold on/off button to turn machine on)
	Software version uploaded on the machine (shown briefly when the machine is turned on) <i>*this could be different to the one pictured</i>
	Close the hood of the machine to allow it to fill, operate the wash or allow to drain
	Machine filling and heating (rinse water temperature will also be shown)
	Selected program progress bars (bars progress from left to right across the screen)
	Last selected program has finished (or machine has finished filling from being empty) <i>*for example could display P1 END, P3 END or P7 END</i>
	Machine ready to drain down (close the hood, or press cycle start button if the hood is already closed to confirm and start drain cycle)
	Machine's wash (left hand) and rinse (right hand) temperatures













**Before you start any shift, it is your responsibility to CHECK:**

Check the levels of the detergent and rinse aid containers. If either of them are low replace them now to prevent them from running out during your shift	(if applicable) Check to see if the low salt warning light is on. If it is, remove the cap and top up the salt with granular salt. If the machine is already full of water, perform a P0 program to replace the wash water <b>afterwards</b> 	Check that all the machine's filters are clean, free from debris and blockages. Check that they are all correctly located. If the machine is already full, perform a P0 program <b>before</b> removing the main large filter to clean	Check the upper and lower wash and rinse arms are clean, free from debris and blockages. Check they are all correctly located and spin freely to ensure the best wash results during your shift
			

**Start of the shift and daily use of the machine:**








1 	<b>With the hood closed:</b> Press and hold the on/off button for a few seconds. The <b>L1</b> light will change from <b>red to green</b> and the display shows the software version uploaded on the machine. This is followed by the wash tank and rinse boiler temperatures, then by the word <b>FILL</b> and the rinse boiler temperature. The <b>L2</b> light will also turn from <b>green to blue</b> . The rinse boiler element light will come on and heat the water. Once heated, the water will empty and part fill the wash tank. This process repeats several times until the wash tank is full (approx. 10-20 mins)
2 	Once ready for use the machine will display the program last used and the word <b>END</b> . The <b>L2</b> light will change from <b>blue to green</b> . The machine is now ready for use
3 	Choose the required program using the program select button. Open the hood and load the basket. Close the hood and the program will start washing automatically. The <b>L2</b> light will again change from <b>green to blue</b>
4 	At the end of the program, the machine will display the word <b>END</b> and the <b>L2</b> light will change from <b>blue to green</b> . Lift the hood and remove the basket, then repeat step 3 as required
5 	Every 20 or 30 cycles, inspect the removable filter inside the machine for food debris and empty and clean as required. <b>IMPORTANT - Do not operate the machine whilst this filter is removed</b>

## P0 Program / wash tank water exchange during the shift:

<p>1</p> 	<p>To activate the <b>P0</b> program either, <b>with the hood up press and hold the program select button for a few seconds until you hear a beep</b> or, <b>with the hood down press and hold the program select button for a few seconds until <b>TANK UNL</b> is displayed. In this case the display will also intermittently show <b>P0 2:00</b></b></p>
<p>2</p> 	<p><b>Close the hood to automatically start P0</b> or, <b>if the hood is already down, press the cycle start button to confirm the drain cycle.</b> In both cases <b>L2</b> will turn from <b>green to blue</b> and the wash tank water will start to be pumped out of the machine</p>
<p>3</p> 	<p>The bars will progress across the screen and once the wash tank is empty the display will show the last selected wash program used followed by the word <b>END</b></p>
<p>4</p> 	<p>Lift the hood and remove the basket guide, all the filters and the upper and lower wash and rinse arms. Clean and inspect the wash and rinse arm nozzles and wash arm hubs for blockages and ensure the filters are free from any dirt or grime <b>IMPORTANT - Do not close the hood at this point</b></p>
<p>5</p> 	<p>With the machine now empty, with a warm damp cloth wipe all the grey plastic parts, as well as around the door gullies and anywhere else dirt and grime is visible inside and around the machine <b>IMPORTANT – Ensure the stainless steel upper and lower spindles that the wash and rinse arms attach to are cleaned and inspected for blockages</b></p>
<p>6</p> 	<p>Put all the parts back in the machine ready to re-fill it <b>IMPORTANT – When replacing the rinse arms, ensure the lower locking nut is at the top of the thread to prevent damage to the machine and poor wash performance</b></p> <div data-bbox="1070 1491 1396 1682">   </div>
<p>7</p> 	<p>Close the hood and the machine will instantly start filling the wash tank again. The display will show the word <b>FILL</b> and the rinse boiler temperature and the <b>L2</b> light will turn from <b>green to blue</b>. The machine will fill via the rinse boiler, until the wash tank is full and the machine is ready to use (approx. 5-10 mins)</p>
<p>8</p> 	<p>At the end of the filling process the machine will display the word <b>END</b> and the <b>L2</b> light will change from <b>blue to green</b>. The machine is now ready to use again</p>



# End of the shift, drain and clean down of the machine:

<p>1</p> 	<p>To activate the drain cycle with the hood up press and hold the drain button for a few seconds until you hear a beep and see the <b>L3</b> light come on</p>
<p>2</p> 	<p>Close the hood and the <b>L2</b> light will turn from <b>green to blue</b> and the display will show <b>UNL 3:25</b>. The countdown will start automatically and the drain cycle will begin. The machine pumps the water out from the wash tank, whilst also emptying the boiler, to use the hot rinse water to flush and clean the cavity of the machine</p>
<p>3</p> 	<p>After the countdown gets to <b>0:00</b> the machine will turn itself <b>OFF</b> and go into standby mode and the <b>L1</b> light will turn from <b>green to red</b></p>
<p>4</p> 	<p>Lift the hood and remove the basket guide, all the filters and the upper and lower wash and rinse arms. Clean and inspect the wash and rinse arm nozzles and wash arm hubs for blockages and ensure the filters are free from any dirt or grime</p>
<p>5</p> 	<p>With the machine now empty, with a warm damp cloth wipe all the grey plastic parts, as well as around the door gullies and anywhere else dirt and grime is visible inside and around the machine <b>IMPORTANT – Ensure the stainless steel upper and lower spindles that the wash and rinse arms attach to are cleaned and inspected for blockages</b></p>
<p>6</p> 	<p>Put all the parts back in the machine ready for the next user. This also prevents anything from getting broken, lost or being misplaced <b>IMPORTANT – When replacing the rinse arm ensure the lower locking nut is at the top of the thread to prevent damage to the machine and poor wash performance</b></p> <div data-bbox="1070 1527 1401 1720">   </div>